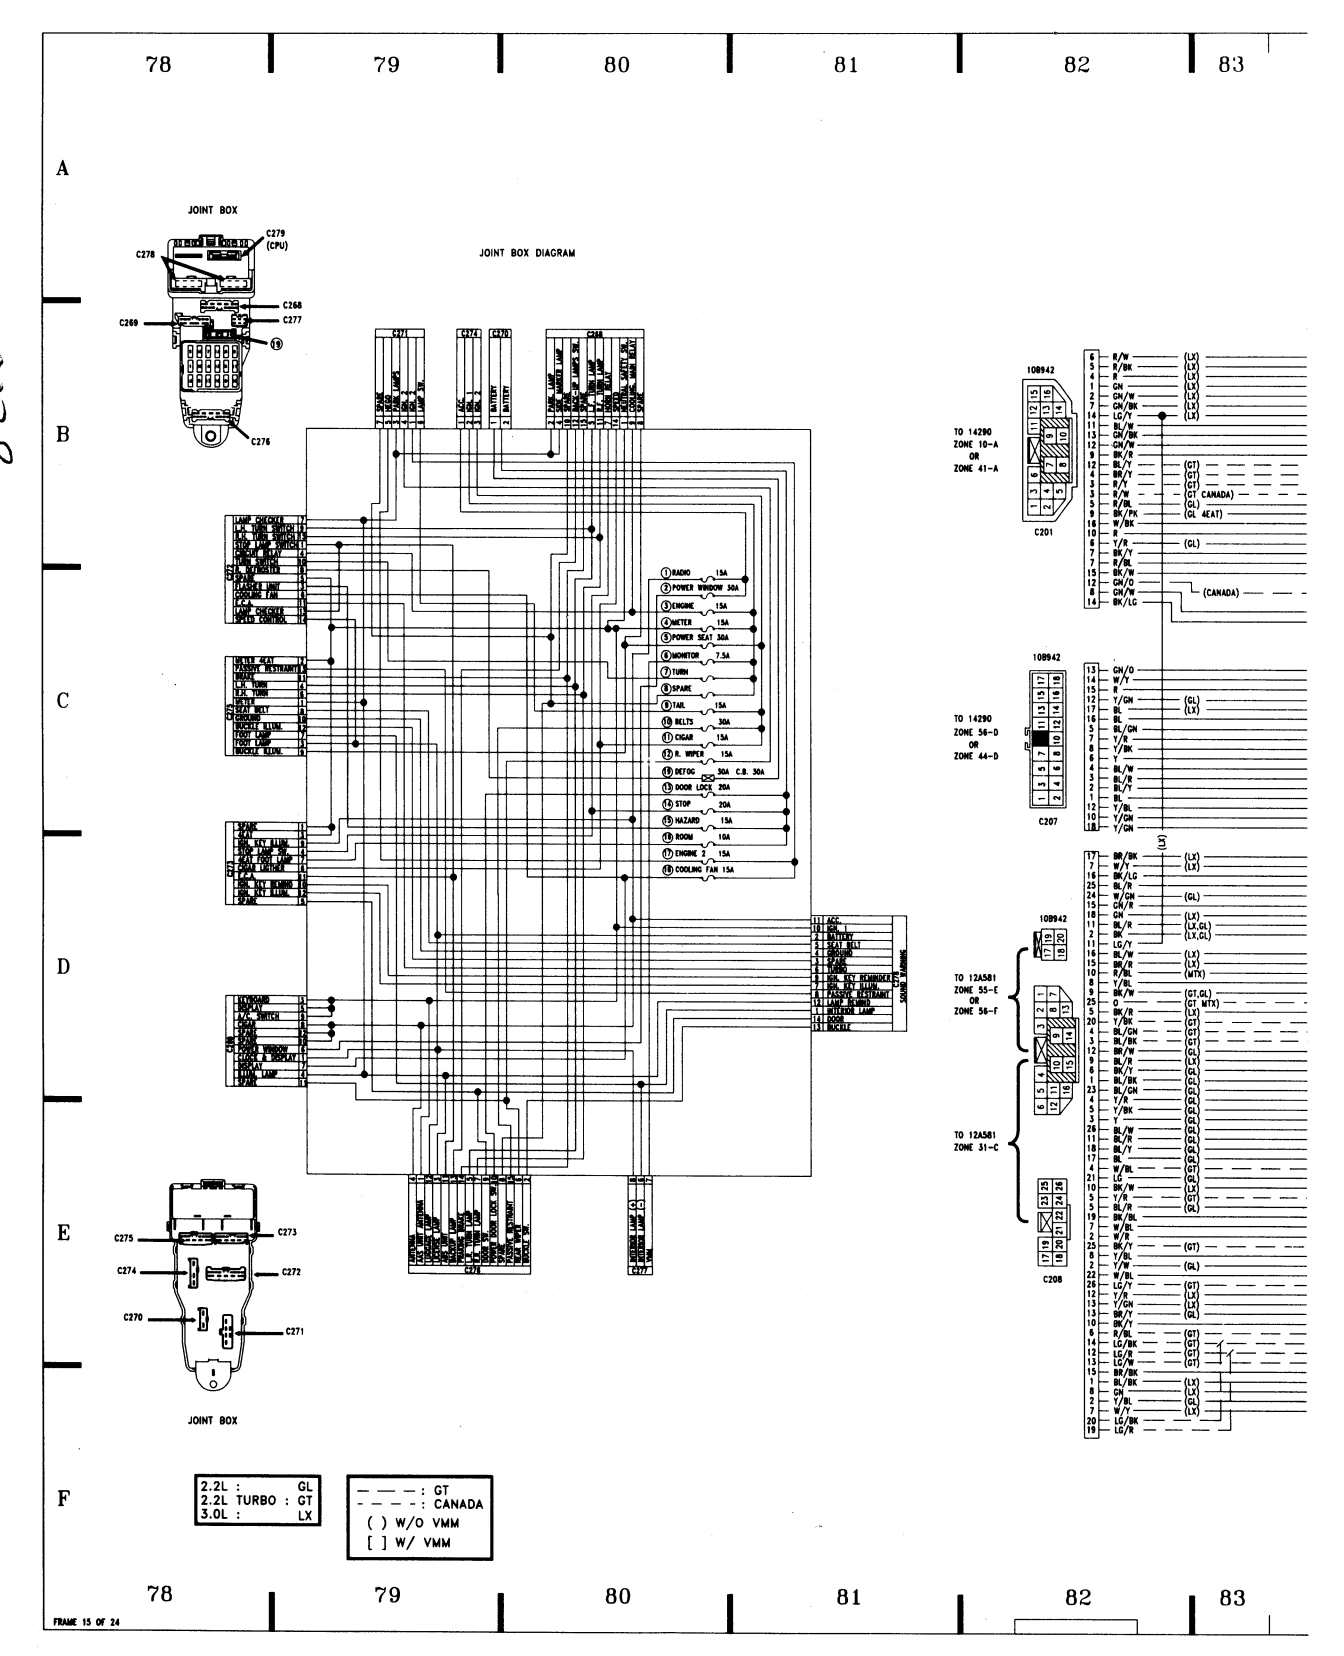
78
79
80
81
82
83
A
B
C
D
E
F
JOINT BOX
C279 (CPU)
C278
C268
C269
C277
C276
JOINT BOX DIAGRAM
C271
C274
C270
C268
1 BATTERY
2 BATTERY
1 ACC
2 IGN
1 BATTERY
2 SEAT BELT
3 GROUND
4 SPARE
5 TURN
6 IGN. KEY REMINDER
7 IGN. KEY ILLUM.
8 PASSIVE RESTRAINT
9 LAMP DIMMER
10 INTERIOR LAMP
11 DOOR
12 BUCKLE
SONIC WARNING
1 RADIO 15A
2 POWER WINDOW 30A
3 ENGINE 15A
4 METER 15A
5 POWER SEAT 30A
6 MONITOR 7.5A
7 TURN 15A
8 SPARE 15A
9 TAIL 15A
10 BELTS 30A
11 CIGAR 15A
12 R. WIPER 15A
13 DEFOG 30A C.B. 30A
14 DOOR LOCK 20A
15 STOP 20A
16 HAZARD 15A
17 ROOM 10A
18 ENGINE 2 15A
19 COOLING FAN 15A
C275
C273
C274
C272
C270
C271
JOINT BOX
2.2L : GL
2.2L TURBO : GT
3.0L : LX
: GT
: CANADA
( ) W/O VMM
[ ] W/ VMM
10B942
C201
TO 14290 ZONE 10-A OR ZONE 41-A
R/W (LX)
R/BK (LX)
R (LX)
GN (LX)
GN/W (LX)
GR/BK (LX)
LG/Y (LX)
BL/W
GR/BK
GN/W
BK/R
BL/Y (GT)
BR/Y (GT)
R/Y (GT)
R/W (GT CANADA)
R/BL (GL)
BR/PK (GL 4EAT)
W/BK
R
Y/R (GL)
BK/Y
R/BL
BK/W
GR/O
GN/W (CANADA)
BK/LG
10B942
C207
TO 14290 ZONE 56-D OR ZONE 44-D
GN/O
W/Y
R
Y/GN (GL)
BL (LX)
BL
BL/GN
Y/R
Y/BK
Y
BL/W
BL/R
BL/Y
BR
Y/BL
Y/GN
Y/GN
(LX)
10B942
C208
TO 12A581 ZONE 55-E OR ZONE 56-F
TO 12A581 ZONE 31-C
BR/BK (LX)
W/Y (LX)
BK/LG
BL/R
W/GN (GL)
GN/R
GN (LX)
BL/R (LX,GL)
BR (LX,GL)
LG/Y
BR/W (LX)
BR/R (LX)
R/BL (MTX)
Y/BL
BR/W (GT,GL)
O (GT MTX)
BR/R (LX)
Y/BK (GT)
BL/GN (GT)
BL/BK (GT)
BR/W (GL)
BL/R (GL)
BK/Y (GL)
BL/BK (GL)
BL/GN (GL)
Y/R (GL)
Y/BK (GL)
Y (GL)
BL/W (GL)
BL/R (GL)
BL/Y (GL)
BL (GL)
W/BL (GT)
LG (GL)
BK/W (LX)
Y/R (GT)
BL/R (GL)
BR/BL
W/BL
W/R
BR/Y (GT)
Y/BL
Y/W (GL)
W/BL
LG/Y (GT)
Y/R (LX)
Y/GN (LX)
BR/Y (GL)
BK/Y
R/BL (GT)
LG/BK (GT)
LG/R (GT)
LG/W (GT)
BR/BK
BL/BK
(LX)
GN
(GL)
Y/BL
W/Y
LG/BK
LG/R
FRAME 15 OF 24